



CONCORDE BATTERY CORPORATION

2009 San Bernardino Road

West Covina, CA 91790

Phone: 626-813-1234

www.concordebattery.com

TO: HOLDERS OF COMPONENT MAINTENANCE MANUAL
FOR RG SERIES MAIN AIRCRAFT BATTERY (CMM 24-30-71)

DOCUMENT NO. 5-0171
REVISION L DATED MAR 11/2011

HIGHLIGHTS

Pages which have been revised, added, or removed are shown below with a brief description of change. Add or remove these pages and record the revision number and the date on the Record of Revisions page.

Page(s)	Description of Change	Effectivity
601	Added 4 year service life limitation to Repair and Disposal Section.	All



CONCORDE BATTERY CORPORATION

2009 San Bernardino Road

West Covina, CA 91790

Phone: 626-813-1234

www.concordebattery.com

RG[®] SERIES MAIN AIRCRAFT BATTERY

COMPONENT MAINTENANCE MANUAL

Document Number	5-0171
Initial Issue Date	Oct 10/2007
Current Revision Date	Mar 11/2011 (Rev. L)

APPLICABILITY

THIS CMM IS APPLICABLE TO RG[®] SERIES MAIN AIRCRAFT BATTERIES INCLUDING BATTERIES AUTHORIZED UNDER TSO-C173. REFER TO DOCUMENT NO. 5-0403 FOR A LIST OF TSO AUTHORIZED BATTERIES. THE LATEST REVISION OF DOCUMENT NO. 5-0403 IS POSTED ON OUR WEBSITE. IF INTERNET ACCESS IS NOT AVAILABLE, A PRINTED COPY WILL BE FURNISHED UPON REQUEST.

NOTE: This CMM supersedes Document No. 5-0142 (Instructions for Continued Airworthiness, Concorde Valve Regulated Lead-Acid Main Battery) and all other maintenance instructions for RG[®] Series main aircraft batteries issued prior to 2008.

The data/information contained herein has been reviewed and approved for general release on the basis that this document contains no export-controlled information.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

RECORD OF REVISIONS

Revision No.	Issue Date	Date Inserted	Inserted By
NC	Oct 10/2007		
A	Jun 02/2008		
B	Oct 15/2008		
C	Jan 20/2009		
D	Mar 11/2009		
E	Jan 07/2010		
F	Apr 14/2010		
G	Jul 15/2010		
H	Aug 06/2010		
J	Sep 29/2010		
K	Dec 08/2010		
L	Mar 11/2011		

NOTE: THE LATEST REVISION OF THIS CMM IS AVAILABLE FOR DOWNLOAD FROM CONCORDE'S WEBSITE IN PDF FORMAT. IF YOU ARE UNABLE TO ACCESS THE INTERNET, CONTACT CONCORDE AND A PRINTED COPY WILL BE SENT TO YOU (SEE FRONT PAGE OF THIS CMM FOR WEBSITE AND COMPANY CONTACT INFORMATION).

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

RECORD OF TEMPORARY REVISIONS

Temporary Revision No.	Page Number	Issue Date	By	Date Removed	By

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG® SERIES MAIN AIRCRAFT BATTERY

SERVICE BULLETIN LIST

SB NUMBER	DESCRIPTION	DATE ISSUED

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG® SERIES MAIN AIRCRAFT BATTERY

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE(S)	DATE OF LATEST REVISION
Title Page	TP-1	Mar 11/2011
Record of Revisions	ROR-1	Mar 11/2011
Record of Temporary Revisions	RTR-1	Mar 11/2011
Service Bulletin List	SBL-1	Mar 11/2011
List of Effective Pages	LOEP-1	Mar 11/2011
Table of Contents	TOC-1 and TOC-2	Mar 11/2011
Introduction	INTRO-1 thru INTRO-3	Mar 11/2011
Description and Operation	1 thru 3	Mar 11/2011
Testing and Fault Isolation	101 thru 107	Mar 11/2011
Schematic and Wiring Diagrams	201	Mar 11/2011
Disassembly	301	Mar 11/2011
Cleaning	401	Mar 11/2011
Check	501	Mar 11/2011
Repair and Disposal	601	Mar 11/2011
Assembly	701	Mar 11/2011
Fits and Clearances	801	Mar 11/2011
Special Tools, Fixtures, Equipment and Consumables	901 and 902	Mar 11/2011
Storage (Including Transportation)	1501 thru 1503	Mar 11/2011
Last Page	LP-1	Mar 11/2011

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG® SERIES MAIN AIRCRAFT BATTERY

TABLE OF CONTENTS

SECTION	PAGE
INTRODUCTION	INTRO-1
1. Scope and Purpose	INTRO-1
2. Application	INTRO-1
3. Definitions	INTRO-1
4. Safety Precautions	INTRO-2
5. Airworthiness Limitations	INTRO-3
6. Deviations	INTRO-3
7. Personnel	INTRO-3
8. Shop Verification	INTRO-3
DESCRIPTION AND OPERATION	1
1. General	1
2. Characteristics of RG Series Main Aircraft Batteries	3
TEST AND FAULT ISOLATION	101
1. Capacity Testing to Verify Continued Airworthiness	101
2. Externally Mounted Components	102
3. Testing Discharged Batteries	102
4. Test Facilities	102
5. Tools, Fixtures, Equipment and Consumables	102
6. Test Set Up	104
7. Capacity Test Procedure	105
8. Constant Potential Charge Procedure	105
9. Conditioning Charge Procedure	106
10. Fault Isolation Summary	107
SCHEMATIC AND WIRING DIAGRAMS	201
DISASSEMBLY	301
CLEANING	401
1. General	401
2. Tools, Fixtures, Equipment and Consumables	401
3. External Cleaning	401
4. Internal Cleaning	401
CHECK	501
1. General	501
2. Tools, Fixtures, Equipment and Consumables	501
3. External Checking	501
4. Internal Checking	501
REPAIR AND DISPOSAL	601
ASSEMBLY	701
FITS AND CLEARANCES	801

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG® SERIES MAIN AIRCRAFT BATTERY

SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES	901
1. Tools	901
2. Fixtures	901
3. Equipment	901
4. Consumables	901
ILLUSTRATED PARTS LIST	NOT APPLICABLE
SPECIAL PROCEDURES	NOT APPLICABLE
REMOVAL	NOT APPLICABLE
INSTALLATION	NOT APPLICABLE
SERVICING	NOT APPLICABLE
STORAGE (INCLUDING TRANSPORTATION)	1501
1. Storage Conditions	1501
2. Storage Facilities	1501
3. Tools, Fixtures, Equipment and Consumables	1501
4. Test Set Up	1501
5. Preparation for Installation	1501
6. Constant Potential Charge Procedure	1502
7. Capacity Test Procedure	1502
8. Conditioning Charge Procedure	1503
9. Transportation	1503
END OF MANUAL (LAST PAGE)	LP-1

LIST OF FIGURES

FIGURE	Page
Figure 101. Test Set Up for RG Series Main Batteries	104

LIST OF TABLES

TABLE	Page
Table 101. List of Test Equipment for 12 Volt Batteries	103
Table 102. List of Test Equipment for 24 Volt Batteries	103
Table 103. List of Mating Connectors	104
Table 901. List of Test Equipment for 12 Volt Batteries	901
Table 902. List of Test Equipment for 24 Volt Batteries	902
Table 903. List of Mating Connectors	902

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

INTRODUCTION

1. Scope and Purpose

A. This Component Maintenance Manual (CMM) has been prepared in accordance with Air Transportation of America (ATA) Specification 100. It provides instructions for proper storage, servicing, replacement, repair, and disposal of RG Series valve regulated lead-acid main aircraft batteries manufactured by Concorde Battery Corporation.

2. Application

- A. Batteries covered by this CMM are designed for engine starting applications and may also be used as an emergency power supply.
- B. The test procedures specified in this CMM apply to batteries that are in a workshop environment. These test procedures are not intended to be performed while batteries are installed in an aircraft.
- C. Batteries covered by this CMM have no field-replaceable components. Batteries with field-replaceable components will have a dedicated CMM with an illustrated parts list.

3. Definitions

- A. Valve regulated lead-acid (VRLA) battery - A lead-acid battery in which there is no free electrolyte and the internal pressure is regulated by a pressure relief valve. This battery requires no maintenance of the liquid level and recombines the gases formed on charge within the battery to reform water. The battery may be used in any attitude without danger of leakage or spilling of electrolyte.
- B. Rated C1 capacity - The nominal capacity, expressed in Ampere-hours (Ah), obtained from a fully charged battery when discharged at the one hour rate to the specified end point voltage at a temperature of 21 - 25°C (70 - 77°F).
- C. C1 rate - The rate, in amperes, equal to the battery's rated C1 capacity. For example, the C1 rate of a battery rated at 3.5Ah is 3.5 amperes.
- D. End Point Voltage (EPV) - The voltage at which the discharge current is terminated when measuring battery capacity. Unless otherwise stated, the EPV is equal to 20.0 volts (10.0 volts for 12 volt batteries).
- E. Open Circuit Voltage (OCV) - The voltage of the battery at rest (no charging or discharging current present). A stable OCV requires a rest of at least four hours.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG® SERIES MAIN AIRCRAFT BATTERY

4. Safety Precautions

- A. **WARNING: LOW CAPACITY HAZARD.** Aircraft batteries are certified to have a certain minimum capacity for emergency operations in the event of a electrical generator system failure. Never use a battery that has less than 80% of rated capacity.
- B. **WARNING: ELECTRIC BURN HAZARD.** Lead-acid batteries are capable of delivering high currents if the terminals are shorted. The resulting heat can cause severe burns and is a potential fire hazard. Take the following precautions:
- Do not place tools or metal objects across battery terminals.
 - Do not wear conductive rings, belt buckles, watches or other jewelry when servicing batteries.
 - Wear insulated gloves and use insulated tools when servicing batteries.
 - Install battery terminal protectors whenever the battery is not connected in the aircraft or to the test equipment.
- C. **WARNING: DANGER OF EXPLODING BATTERIES.** Lead-acid batteries can produce explosive mixtures of hydrogen and oxygen while on charge or discharge, which can explode if ignited. Take the following precautions:
- Do not smoke, use an open flame, or cause sparking near a battery.
 - Wear proper eye and face protection when servicing batteries.
 - Make sure work area is well ventilated.
 - Do not constant current charge a battery when installed in an aircraft.
 - Connect cables securely to the battery terminals to avoid arcing.
- D. **WARNING: DANGER OF CHEMICAL BURNS.** Lead-acid batteries contain sulfuric acid which can cause severe burns to body tissue. Take the following precautions:
- Never remove or damage vent valves.
 - Avoid contact of the electrolyte with skin, eyes or clothing.
 - Do not touch eyes after touching battery.
 - In the event of acid in the eyes, flush thoroughly with clean cool water for several minutes and get professional medical attention immediately.
 - Refer to battery MSDS for additional information.
- E. **CAUTION: DANGER OF EQUIPMENT DAMAGE.** To prevent damage to the connector, arc burns, or explosion, batteries should never be connected or disconnected while being charged or discharged. Batteries must be connected or disconnected only when the circuit is open. Ensure the aircraft battery switch, external power source, or the charger/analyzer is in the "OFF" position before connecting or disconnecting the battery. Battery terminal protectors should be installed whenever the battery is not connected in the aircraft or to the test equipment.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

5. Airworthiness Limitations

- A. For batteries covered by TSO-C173 the following limitation applies: The conditions and tests for TSO approval of this battery are minimum performance standards. Those installing this battery, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only according to 14CFR part 43 or the applicable airworthiness requirements. Nickel-cadmium and lead-acid battery safety concerns include the possibility of fire and venting violently.
- B. For batteries not covered by TSO-C173, there are no airworthiness limitations associated with the installation of a Concorde valve-regulated lead-acid battery in an aircraft.

NOTE: THE AIRWORTHINESS LIMITATIONS SECTION IS FAA APPROVED AND SPECIFIES MAINTENANCE REQUIRED UNDER 14 CFR §§ 43.16 AND 91.403, UNLESS AN ALTERNATIVE PROGRAM HAS BEEN FAA APPROVED.

6. Deviations

- A. TSO-C173 dated May 2/2005 references RTCA/DO-293 dated Jul 29/2004. Batteries covered by this CMM are approved based on Change 1 to RTCA/DO-293 dated Dec 13/2006 or RTCA/DO-293A dated Dec2/2009.

7. Personnel

- A. Only personnel authorized by the FAA to perform battery maintenance are permitted to service Concorde aircraft batteries (see FAR 43.3).

8. Shop Verification

- A. The following sections of this CMM were verified by actual performance:
- Testing and Fault Isolation – verified 5/14/10.
 - Disassembly – not applicable.
 - Assembly – not applicable.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY
DESCRIPTION AND OPERATION

1. General

A. Cell Construction:

Concorde aircraft batteries are valve-regulated, recombinant gas, absorbed electrolyte, lead acid batteries. The cells are sealed with a pressure relief valve that prevents gases within the battery from escaping. The positive and negative plates are sandwiched between layers of glass mat consisting of glass micro fibers of varying length and diameter. This blend features superior wicking characteristics and promotes maximum retention of the electrolyte. Electrolyte is absorbed and held in place by the capillary action between the fluid and the absorptive glass mat (AGM) fibers. By design, the AGM separator is only about 90-95% saturated with electrolyte. The void space provides the channels by which oxygen travels from the positive to the negative plates during charging. When the oxygen gas reaches the negative plate, it reacts with lead to form lead oxide and water. This reaction at the negative plate suppresses the generation of hydrogen that otherwise would come off the negative plate. In this manner, virtually all of the gas is recombined inside the cell, eliminating the need to add water, resulting in "maintenance free" operation.

B. Grids and Plates:

Each cell of a storage battery has positive and negative plates arranged alternately, insulated from each other by separators. Each plate consists of a framework, called the grid, and a lead paste compound called active material. The grid is cast from a lead alloy. A heavy outside frame adds strength to the plate for good vibration and shock durability. The small horizontal and vertical wires support the active material. These wires also act as conductors for the current. The lead paste compound (active material) is applied to the grid in much the same manner as plaster is applied to a lath wall. A different paste formula is used for the positive and negative plates.

C. Plate Groups:

Plate groups are made by joining a number of similar plates to a common terminal post by means of a plate strap. The capacity of a battery is determined by the number and size of plates in a group. Each plate is made with a lug at the top which is fused to the strap. A positive group consists of a number of positive plates connected to a plate strap and a negative group consists of a number of negative plates connected in the same manner. The two groups meshed together with separators between the positive and negative plates constitute a cell element.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

On discharge, lead dioxide (PbO_2) of the positive electrode and sponge lead (Pb) of the negative electrode are both converted to lead sulfate (PbSO_4) freeing two electrons. On charge, the lead sulfate in the positive electrode is converted to lead dioxide (PbO_2) (with oxygen evolution on charge) and the lead sulfate in the negative electrode is converted to sponge lead (with hydrogen evolution on charge). The electrolyte, sulfuric acid (H_2SO_4), is an active component in the reaction at both electrodes.

When flooded (vented) batteries are on charge, the oxygen generated at the positive plates escapes from the cell. Concurrently, at the negative plates, hydrogen is generated from water and escapes from the cell. The overall result is the gassing of the cells and water loss. Therefore, flooded cells require periodic water replenishment.

CAUTION: DO NOT REMOVE THE PRESSURE RELIEF VALVES ON AN RG BATTERY AND DO NOT ADD WATER OR ELECTROLYTE. THE RECOMBINANT GAS DESIGN ELIMINATES THE NEED TO REPLENISH WATER AND ELECTROLYTE. REMOVING THE PRESSURE RELIEF VALVE VOIDS THE WARRANTY.

When valve regulated batteries are on charge, oxygen combines chemically with the lead at the negative plates in the presence of sulfuric acid to form lead sulfate and water. This oxygen recombination suppresses the generation of hydrogen at the negative plates. Overall, there is minimal water loss during charging. A very small quantity of water may be lost as a result of self discharge reactions. However, such loss is so small that no provision need be made for water replenishment. The battery cells have a pressure relief safety valve that may vent if the battery is overcharged.

2. Characteristics of RG Series Main Aircraft Batteries

- A. The RG Series of main aircraft batteries consist of 6 or 12 cells connected in series to make a nominal 12 VDC or 24VDC battery, respectively. The cells are contained in a plastic or metallic container equipped with an electrical receptacle for mating to the aircraft. In some models, temperature sensors are present that interface to the aircraft charging and/or electrical system. Also, some models contain heaters to warm the batteries for operation in extreme cold temperature environments.
- B. Technical characteristics of the various models are detailed on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

TESTING AND FAULT ISOLATION

1. Capacity Testing to Verify Continued Airworthiness
 - A. Batteries Used to Start Turbine Engines:
 1. Operating less than 1000 hours per year.
 - a. Initial check at 12 months after initial installation (± 1 month).
 - b. As long as the capacity is above 90%, subsequent capacity checks every 6 months in service (± 1 month).
 - c. If the capacity is between 85 and 90%, subsequent checks every 3 months in service (± 1 month).
 - d. If the capacity is less than 85%, remove battery from service.
 2. Operating 1000 hours per year or more:
 - a. Initial check at 1000 hours after initial installation (± 100 hours).
 - b. As long as the capacity is above 90%, subsequent capacity checks every 500 hours in service (± 100 hours).
 - c. If the capacity is between 85 and 90%, subsequent checks every 250 hours in service (± 100 hours).
 - d. If the capacity is less than 85%, remove battery from service.
 - B. Batteries Not Used to Start Turbine Engines:
 1. Operating less than 1000 hours per year:
 - a. Initial check at 12 months after initial installation (± 1 month).
 - b. As long as the capacity is above 90%, subsequent capacity checks every 12 months in service (± 1 month).
 - c. If the capacity is between 85 and 90%, subsequent checks every 6 months in service (± 1 month).
 - d. If the capacity is less than 85%, remove battery from service.
 2. Operating 1000 hours per year or more:
 - a. Initial check at 1000 hours after initial installation (± 100 hours).
 - b. As long as the capacity is above 90%, subsequent capacity checks every 1000 hours in service (± 100 hours).
 - c. If the capacity is between 85 and 90%, subsequent checks every 500 hours in service (± 100 hours).
 - d. If the capacity is less than 85%, remove battery from service.

NOTE: THE CAPACITY CHECK INTERVALS SPECIFIED ABOVE ARE GENERAL RECOMMENDATIONS SUITABLE FOR MOST APPLICATIONS. THE INTERVALS MAY BE ADJUSTED FOR A SPECIFIC AIRCRAFT OR FLEET ONCE THE AVERAGE BATTERY LIFE IS ESTABLISHED.

WARNING: CAPACITY CHECKS PROVIDE ASSURANCE OF CONTINUED AIRWORTHINESS OF THE BATTERY. ADJUSTMENTS TO THE FREQUENCY OF CAPACITY CHECKS SHOULD BE BASED ON CAREFUL CONSIDERATION OF FACTORS THAT AFFECT BATTERY LIFE. THESE FACTORS INCLUDE OPERATING PATTERNS, ENVIRONMENTAL CONDITIONS, AND CONFIGURATION OF THE AIRCRAFT ELECTRICAL SYSTEM. IF ANY OF THESE FACTORS CHANGE, THE BATTERY LIFE SHOULD BE RE-ESTABLISHED USING THE ORIGINAL CAPACITY CHECK SCHEDULE.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG® SERIES MAIN AIRCRAFT BATTERY

2. Externally Mounted Components

- A. Temperature Sensors: Some battery models are equipped with externally mounted temperature sensors. Instructions for inspection and testing of Concorde temperature sensors are contained in separate maintenance manual supplements for each type of temperature sensor. These maintenance manual supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.
- B. Heater Control Units: Some battery models are equipped with externally mounted heater control units (HCUs). Instructions for inspection and testing of Concorde HCUs and the associated heating element within the battery are contained in separate maintenance manual supplements. These supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.

3. Testing Discharged Batteries

- A. If a battery is discharged below the recommended end point voltage of 20 volts (10 volts for 12V batteries) and is not recharged within 24 hrs, it should be subjected to a capacity test to assure airworthiness (see Paragraph 7).
- B. After airworthiness is verified, the capacity test schedule may be adjusted using this new date and equipment flight hours as the starting point for the next capacity check interval.

4. Test Facilities

- A. Concorde valve regulated lead-acid (VRLA) batteries may be serviced in any battery facility, including nickel-cadmium service facilities. VRLA batteries are sealed to prevent cross contamination of the electrolyte.

WARNING: LEAD-ACID BATTERIES CAN PRODUCE EXPLOSIVE MIXTURES OF HYDROGEN AND OXYGEN WHILE BEING CHARGED OR DISCHARGED. NEVER SERVICE BATTERIES IN AN AIRTIGHT OR SEALED ENCLOSURE AND MAKE SURE WORK AREA IS WELL VENTILATED.

5. Tools, Fixtures, Equipment and Consumables

- A. Refer to Table 101 for required test equipment for 12 volt batteries.
- B. Refer to Table 102 for required test equipment for 24 volt batteries.
- C. Refer to Table 103 for mating connectors.

NOTE: EQUIVALENT SUBSTITUTES MAY BE USED FOR THESE ITEMS.

CAUTION: CONTACT CONCORDE FOR ASSISTANCE WITH SELECTION OF BATTERY CHARGING EQUIPMENT. SOME BRANDS OF BATTERY CHARGERS WILL DESTROY THE BATTERY.

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG[®] SERIES MAIN AIRCRAFT BATTERY

Table 101. List of Test Equipment for 12 Volt Batteries

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 10-14 VDC with EPV termination at 10 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 14.00 – 14.25 VDC and at least C1 ADC output.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 17 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable 9-17 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 103	Connect Battery to Test Equipment

Table 102. List of Test Equipment for 24 Volt Batteries

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 20-28 VDC with EPV termination at 20 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 28.00 – 28.50 VDC and at least C1 ADC output.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 34 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable of 18-34 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 103	Connect Battery to Test Equipment

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG® SERIES MAIN AIRCRAFT BATTERY

6. Test Set Up

- A. Refer to Figure 101 for a schematic of the test set up.
- B. Make the interconnect cabling locally using mating connectors shown in Table 103.

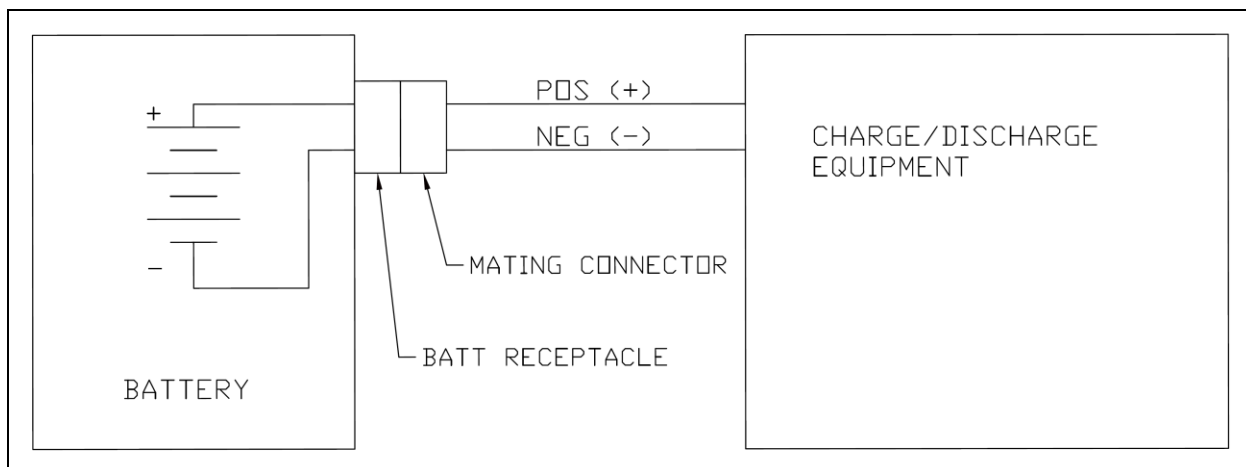


Figure 101. Test Set Up for RG Series Main Batteries

Table 103. List of Mating Connectors

Battery Receptacle (Shown on envelope drawing)	Mating Connector (Obtain locally)
IEC 60952-2 Type A or B BAC Type 102	BAC Type 215
IEC 60952-2 Type C	MS3349-3
IEC 60952-2 Type Q MS3509	MS25182-2 or MS3349-2
IEC 60952-2 Type R	14mm or 0.550" diameter pins
M8 Threaded Terminals	8mm or 5/16" ring terminals

NOTE: IF BATTERY RECEPTACLE IS NOT LISTED ABOVE, CONTACT CONCORDE FOR ASSISTANCE.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

7. Capacity Test Procedure

- A. Stabilize the battery at 20°C (68°F) or higher. The battery must be at this temperature for at least 20 hours.
- B. Charge the battery at constant potential per Paragraph 8.
- C. Connect the battery to the discharge equipment and discharge at the C1 rate on the label (ie, 42 Amps for a 42 AH battery).
- D. Discharge the battery to an EPV of 20 volts (10 volts for 12 Volt batteries) or other EPV specified by the airframe or equipment manufacturer.
- E. Record the time to the EPV. The battery passes the capacity test if the time to the EPV is 51 minutes or greater (85% of rated C1 capacity or greater).

NOTE: AIRFRAME OR ACCESSORY EQUIPMENT MANUFACTURERS MAY SPECIFY A DIFFERENT CAPACITY REQUIREMENT, WHICH SHOULD TAKE PRECEDENCE.

- F. If the battery passes the capacity test, charge at constant potential per Paragraph 8 and return battery to full state of charge. The battery is acceptable for installation.
- G. If the battery fails the capacity test, perform the conditioning procedure given in Paragraph 9. After the battery has been conditioned repeat the capacity test.
- H. If the battery passes the second capacity test, return it to service. If the battery fails the second capacity test, repeat the conditioning charge and repeat the capacity test.
- I. If the battery passes the third capacity test, return it to service. If the battery fails the third capacity test, the battery should be replaced.
- J. If the battery gets very hot (external case temperature greater than 55°C/130°F) during charging, the battery should be replaced.

8. Constant Potential Charge Procedure

NOTE: CONSTANT POTENTIAL CHARGING IS THE PREFERRED METHOD OF CHARGING THE BATTERY. IF THE BATTERY DOES NOT PASS THE CAPACITY TEST, THE CONDITIONING CHARGE PROCEDURE SHOULD THEN BE USED.

- A. Connect the battery terminals to the constant potential charging equipment.
- B. Apply a constant potential of 28.25 ± 0.25 volts (14.125 ± 0.125 volts for 12 Volt batteries) with a current capability of at least C1 amperes.
- C. Continue charging until the charge current remains constant (within 10%) for 3 consecutive hourly readings.
- D. Allow the battery to cool down for at least one hour before any other tests are performed.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

9. Conditioning Charge Procedure

WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.

CAUTION: THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.

CAUTION: A CONDITIONING CHARGE IS ONLY NECESSARY IF THE BATTERY FAILS THE CAPACITY TEST. THIS PROCEDURE MAY SHORTEN THE BATTERY'S LIFE IF PERFORMED ON A REPETITIVE BASIS.

NOTE: IF A BATTERY REQUIRES A CONDITIONING CHARGE TO PASS THE CAPACITY TEST, SUBSEQUENT CAPACITY CHECKS SHOULD BE AT THE INCREASED FREQUENCY SPECIFIED IN PARAGRAPH 1 OF THIS SECTION (3 MONTHS/250 HOURS FOR TURBINE ENGINE BATTERIES OR 6 MONTHS/500 HOURS FOR ALL OTHER BATTERIES).

- A. Discharge the battery at the C1 rate to an EPV of 20 volts (10 volts for 12 Volt batteries). If the battery has already been discharged to the EPV, skip this step.
- B. Connect the battery to the constant current charging equipment.
- C. Charge at a constant current rate of C1 /10 (i.e., 4.2 Amps for a 42 Ah battery) until the voltage on charge is 31.0 volts (15.5 volts for 12 Volt batteries) or higher for 4 hours, then discontinue charging.

CAUTION: IF THE BATTERY BECOMES HOT (ABOVE 55°C/130°F) DURING THIS CHARGE, STOP THE CURRENT AND ALLOW THE BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.

- D. After charging, allow the battery to cool down for at least 8 hours before any other tests are performed.

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG[®] SERIES MAIN AIRCRAFT BATTERY

10. Fault Isolation Summary

Symptom	Probable Cause	Corrective Action
Low voltage / no voltage.	Battery partially or fully discharged.	Perform capacity test.
	Battery fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
Battery capacity less than 85% of rating.	Battery cells beyond serviceable life.	Replace battery.
Battery does not hold charge.	Battery cells beyond serviceable life.	Replace battery.
Battery gets hot while recharging.	Battery cells beyond serviceable life.	Replace battery.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY
SCHEMATIC AND WIRING DIAGRAMS

1. General

- A. Schematic diagrams and/or polarity markings are shown on the envelope drawing of each specific battery model.
- B. The latest approved envelope drawings are available on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY
DISASSEMBLY

1. General

- A. Batteries covered by this CMM have no field-replaceable components and are not designed for disassembly/re-assembly.
- B. Some battery models are equipped with externally mounted temperature sensors. Instructions for replacing temperature sensors are contained in separate maintenance manual supplements for each type of temperature sensor. These maintenance manual supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

CLEANING

1. General

- A. This section contains general cleaning instructions for Concorde aircraft batteries.
- B. Clean battery when it is being serviced for capacity testing.
- C. Batteries do not need to be disassembled for cleaning.

CAUTION: DO NOT USE ANY TYPE OF SOLVENT TO CLEAN THE BATTERY. SOLVENTS MAY DAMAGE THE BATTERY.

2. Tools, Fixtures, Equipment and Consumables

- A. Consumables: Lint-free shop cloth (commercially available) and tap water (commercially available).

3. External Cleaning

- A. Clean the outside surfaces of the battery with a lint-free shop cloth that is clean, dry, and free of oil.
- B. If the battery has caked-on dirt or grime, use a cloth dampened with tap water, then wipe dry.

4. Internal Cleaning:

- A. Internal cleaning is not required.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

CHECK

1. General
 - A. This section contains general checking instructions for Concorde aircraft batteries.
 - B. Check battery when it is being serviced for capacity testing.
 - C. Batteries do not need to be disassembled for checking.
2. Tools, Fixtures, Equipment and Consumables
 - A. None required.
3. External Checking
 - A. Check the outside surfaces of the battery and electrical connector(s) for deterioration or corrosion that may affect the battery's operation.
 - B. Check the battery for loose or missing fasteners.
 - C. Check the identification and informational labels to ensure they are legible and securely attached.
 - D. If the above checks reveal items that need attention, repair or replace battery as appropriate.
4. Internal Checking
 - A. Internal checks are not required.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

REPAIR AND DISPOSAL

1. General

- A. Batteries covered by this CMM have no internal components that are repairable. The battery assembly must be replaced when internal components (i.e., battery cells) fail or wear out.
- B. Refer to the Section on TESTING AND FAULT ISOLATION to determine if the battery assembly needs to be replaced.
- C. The battery assembly should be replaced after 4 years of service life.
- D. If external repairs are needed to the battery assembly, have it serviced in an authorized repair facility or contact Concorde for assistance (see front page of this CMM).

2. Disposal

- A. Concorde aircraft batteries contain lead, sulfuric acid, and other hazardous materials. Never discard batteries in the trash or in a landfill.
- B. Dispose spent batteries and assemblies in accordance with local ordinances and regulations.
- C. Some batteries are encased in aluminum or titanium containers, which need to be removed before the battery cells are sent to the lead smelter for recycling. Make sure the recycling collector is aware of this requirement.
- D. See battery Material Safety Data Sheet (MSDS) for additional information.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY
ASSEMBLY

1. General

- A. Batteries covered by this CMM have no field-replaceable components and are not designed for disassembly/re-assembly.
- B. Some battery models are equipped with externally mounted temperature sensors. Instructions for replacing temperature sensors are contained in separate maintenance manual supplements for each type of temperature sensor. These maintenance manual supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

FITS AND CLEARANCES

1. General
 - A. Refer to the envelope drawing for each specific battery model. The envelope drawing provides overall dimensions, mounting provisions, and maximum weight of the battery.
 - B. The latest approved envelope drawings are available on Concorde's website (see front page of this CMM).
 - C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG[®] SERIES MAIN AIRCRAFT BATTERY

SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES

1. Tools
A. Not applicable.
2. Fixtures
A. Not applicable.
3. Equipment
A. Refer to Tables 901, 902 and 903.

NOTE: EQUIVALENT SUBSTITUTES MAY BE USED FOR THESE ITEMS.

4. Consumables
A. Lint-free cloth (commercially available).
B. Tap water (commercially available).

Table 901. List of Test Equipment for 12 Volt Batteries

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 10-14 VDC with EPV termination at 10 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 14.0 – 14.25 VDC and at least C1 ADC output.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 17 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable 9-17 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 903	Connect Battery to Test Equipment

CONCORDE BATTERY CORPORATION
 COMPONENT MAINTENANCE MANUAL
 RG® SERIES MAIN AIRCRAFT BATTERY

Table 902. List of Test Equipment for 24 Volt Batteries

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 20-28 VDC with EPV termination at 20 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 28.0 – 28.5 VDC and at least C1 ADC output.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 34 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable of 18-34 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 903	Connect Battery to Test Equipment

Table 903. List of Mating Connectors

Battery Receptacle (Shown on envelope drawing)	Mating Connector (Obtain locally)
IEC 60952-2 Type A or B BAC Type 102	BAC Type 215
IEC 60952-2 Type C	MS3349-3
IEC 60952-2 Type Q MS3509	MS25182-2 or MS3349-2
IEC 60952-2 Type R	14mm or 0.550" diameter pins
M8 Threaded Terminals	8mm or 5/16" ring terminals

NOTE: IF BATTERY RECEPTACLE IS NOT LISTED ABOVE, CONTACT CONCORDE FOR ASSISTANCE.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

STORAGE (INCLUDING TRANSPORTATION)

1. Storage Conditions

- A. Batteries are serviced and charged at the factory prior to shipment.
- B. To prolong shelf life, batteries should be stored in a cool location, ideally below 20°C (68°F).
- C. The open circuit voltage (OCV) of a fully charged battery is approximately 26.0 volts (13.0 volts for 12 Volt batteries). As the battery state of charge drops due to self-discharge, its OCV also declines.
- D. Batteries should be boost charged per Paragraph 6 when the OCV declines to 25.0 volts (12.5 volts for 12 Volt batteries).
- E. Batteries with an OCV below 25.0 volts (12.5 volts for 12 Volt batteries) due to improper or inadequate boost charging must be capacity tested per Paragraph 7 before being placed in service.

CAUTION: WHEN BATTERIES ARE INSTALLED IN AIRCRAFT DURING STORAGE (OR EXTENDED PERIODS OF NON-USE), IT IS BEST TO DISCONNECT THE BATTERY CONNECTOR. THIS PRACTICE WILL ELIMINATE UNNECESSARY DRAIN ON THE BATTERY WHEN PARASITIC LOADS ARE PRESENT. OTHERWISE, THE BATTERY SERVICE LIFE MAY BE ADVERSELY AFFECTED.

2. Storage Facilities

- A. Concorde valve regulated lead-acid aircraft batteries may be stored and serviced in any battery facility, including nickel-cadmium service facilities. These batteries are sealed to prevent cross contamination of the electrolyte.
- B. Lead-acid batteries can produce explosive mixtures of hydrogen and oxygen while being charged or discharged. Never service batteries in an airtight or sealed enclosure and make sure the work area is well ventilated.

3. Tools, Fixtures, Equipment and Consumables

- A. Refer to Table 101 for 12 volt batteries and Table 102 for 24 volt batteries.
- B. Refer to Table 103 for mating connectors.

4. Test Set Up

- A. Refer to Figure 101.

5. Preparation for Installation

- A. Remove battery from the shipping carton and visually inspect the battery for signs of damage. Do not use the battery if it appears to be damaged, contact Concorde for assistance.
- B. Measure the battery's open circuit voltage (OCV) with a DMM.
- C. If the OCV equals or exceeds 25.5 volts (12.75 volts for 12 Volt batteries), the battery can be installed in the aircraft without boost charging.
- D. If the OCV equals or exceeds 25.0 volts and is less than 25.5 volts (12.5 and 12.75 volts for 12 Volt batteries), apply a boost charge per Paragraph 6. The battery can then be installed in the aircraft.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

- E. If the OCV is below 25.0 volts (12.5 volts for a 12 volt battery), perform a capacity test per Paragraph 7 before installing in the aircraft.

6. Constant Potential Charge Procedure

NOTE: CONSTANT POTENTIAL CHARGING IS THE PREFERRED METHOD OF CHARGING THE BATTERY. IF THE BATTERY FAILS THE CAPACITY TEST, THE CONDITIONING CHARGE PROCEDURE SHOULD BE USED.

- A. Connect the battery terminals to the constant voltage charging equipment.
- B. Apply a constant potential of 28.25 ± 0.25 volts (14.125 ± 0.125 volts for 12 Volt batteries) with a current capability of at least C1 amperes.
- C. Continue charging until charge current remains constant (within 10%) for 3 consecutive hourly readings.
- D. Allow the battery to cool down for at least one hour before any other tests are performed.

7. Capacity Test Procedure

- A. Stabilize the battery at 20°C (68°F) or higher. The battery must be at this temperature for at least 24 hours.
- B. Constant potential charge the battery per Paragraph 6.
- C. Connect the battery to the discharge equipment and discharge at the C1 rate on the label (ie, 42 Amps for a 42 AH battery).
- D. Discharge the battery to an end point voltage of 20 volts (10 volts for 12 volt batteries) or other EPV specified by the airframe or equipment manufacturer.
- E. Record the time to the EPV. The battery passes the capacity test if the time to the EPV is 51 minutes or greater (85% of rated C1 capacity or greater).

NOTE: AIRFRAME OR ACCESSORY EQUIPMENT MANUFACTURERS MAY SPECIFY A DIFFERENT CAPACITY REQUIREMENT, WHICH SHOULD TAKE PRECEDENCE.

- F. If the battery passes the capacity test, charge at constant potential per Paragraph 6 and return battery to full state of charge. The battery is acceptable for installation.
- G. If the battery fails the capacity test, perform the conditioning procedure given in Paragraph 8. After the battery has been conditioned repeat the capacity test.
- H. If the battery passes the second capacity test, it is acceptable for installation. If the battery fails the second capacity test, repeat the conditioning charge and repeat the capacity test.
- I. If the battery passes the third capacity test, it is acceptable for installation. If the battery fails the third capacity test, the battery should be replaced.
- J. If the battery gets very hot (external case temperature greater than 55°C/130°F) during charging, the battery should be replaced.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG® SERIES MAIN AIRCRAFT BATTERY

8. Conditioning Charge Procedure

WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.

CAUTION: THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.

CAUTION: A CONDITIONING CHARGE IS ONLY NECESSARY IF THE BATTERY FAILS THE CAPACITY TEST. THIS PROCEDURE MAY SHORTEN THE BATTERY'S LIFE IF PERFORMED ON A REPETITIVE BASIS.

- A. Discharge the battery at the C1 rate to an EPV of 20 volts (10 volts for 12 Volt batteries). If the battery is already discharged to 20 volt EPV, skip this step.
- B. Connect the battery to the constant current charging equipment.
- C. Charge at a constant current rate of C1 /10 (i.e., 4.2 Amps for a 42 Ah battery) until the voltage on charge is 31.0 volts (15.5 volts for 12 Volt batteries) or higher for 4 hours, then discontinue charging.

CAUTION: IF THE BATTERY BECOMES HOT (ABOVE 55°C/130°F) DURING THIS CHARGE, STOP THE CURRENT AND ALLOW THE BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.

- E. After charging, allow the battery to cool down for at least 8 hours before any other tests are performed.

9. Transportation

- A. If the OCV is less than 25.5 volts (12.75 volts for 12 Volt batteries), charge the battery per paragraph 6 before shipment.
- B. The battery should be packaged in its original container. If the original container is not available, follow local packaging regulations applicable to the mode of transport.
- C. RG Series batteries are classified as a "NONSPILLABLE BATTERY" and comply with Special Provision A67 of the International Air Transport Association (IATA) Dangerous Goods regulations. As such, they can be shipped as non-hazardous by any means.

CONCORDE BATTERY CORPORATION
COMPONENT MAINTENANCE MANUAL
RG[®] SERIES MAIN AIRCRAFT BATTERY

THIS PAGE
INTENTIONALLY
LEFT BLANK